


DS2-black

Steam wire - EPDM - 18/55 bar - D - black

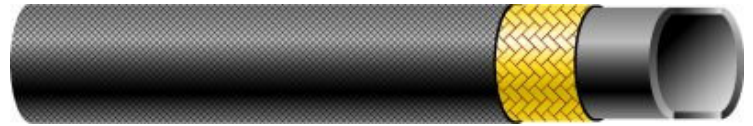

SPECIFICATIONS

Application	Suitable for conveying saturated steam and hot water.
Standard/Approval	According BS 5342:1985 2A.
Temperature range	-35°C / +210°C [saturated steam], +95°C [hot water].
Safety factor	Steam 10 : 1, Hot water 3,15 : 1
Tube	EPDM, black, electrically conductive, smooth.
Reinforcement	Steel braided.
Cover	EPDM, black, resistant to ozone and weather, cloth impression.
Marking	continuous embossed tape: "SEMPERIT [S] DS2 STEAM HOSE BS 5342:2A ID MM/YY 18 bar/210°C 250psi/410°F DRAIN AFTER USE MADE IN EU //////////////".
Notice	ATTENTION: Superheated steam [e.g. 18bar, 232°C] shortens considerably the service life of the hose! ATTENTION: Please refer to the saturated steam table. Other lengths [up to 60m] for ID up to 25mm available on request.

TECHNICAL DETAILS

Article number	Internal-Ø		Wall width	External-Ø	Work. pressure [max.]		Number of inserts	Bending radius [min.]	Weight approx.	Coil length [max.]
	mm	inch			Satur. steam [bar]	Hot water [bar]				
68700 1355	13.5	1/2	5.5	24.5	18	55	1	80	0.50	40
68700 1960	19.0	3/4	6.0	31.0	18	55	1	110	0.65	40
68700 2565	25.0	1	6.5	38.0	18	55	2	170	1.00	40
48700 3270	32.0	1 1/4	7.0	46.0	18	55	2	150	1.30	40
48700 3875	38.0	1 1/2	7.5	53.0	18	55	2	200	1.55	40
48700 5180	50.8	2	8.0	67.0	18	55	2	300	2.15	40
48700 7685	76.2	3	8.5	93.0	18	55	2	450	3.40	40

* DN 13,5 and DN 76,2 are no BS 5342:1985 2A dimensions

Please note: Before using our products with new or untested media, or for applications that are not clearly indicated in the product information, written advice must be obtained from a specialist dealer or a Semperit application engineer. For safety reasons, all products must be inspected regularly for operational safety and replaced in the event of any damage [especially of the cover] or unusual signs of wear and tear. All products must be stored, handled, and maintained in accordance with all our respective instructions and DIN 7716:1982. The information in our catalogue as well as each individual datasheet is subject to change at any time without notice since we are constantly developing and improving our products and due to constant technical developments after the latest release date of the catalogue and/or individual datasheets. To always have the latest product and safety information make sure you visit our website [https://hoses.semperitgroup.com/] regularly or contact one of our specialist dealers or a Semperit application engineer. All contracts with Semperflex are exclusively subject to our general terms and conditions [available at ww.semperitgroup.com]. Additional important general information about the range, choice and safe use of our products can be found at our website [https://hoses.semperitgroup.com/] and must be followed without exception.

Important notice: Our catalogue and any individual datasheet have been prepared with great care in order to provide you with all the information you need. The information contained therein is based on the latest state-of-the-art industrial technology and many years of experience and testing; whenever indicated for a certain product, we also confirm conformity with the resistance requirements of the media listed in ISO TR

7620:2005[E]. However, the individual conditions of storage, maintenance and use decisively affect the safe and durable use of each product. The quality and safety of our products as indicated in the catalogue or individual datasheets are therefore strictly subject to the continuous observance of all specifications and restrictions in our written product information and applicable laws and standards, the specifications regarding resistance to chemicals and our cleaning procedures. We reject any liability for safety issues or other consequences due to improper product choice, maintenance, or handling (e.g. squashing, rupturing, stretching, or filling with non-approved media). Our products must not be used in airplanes or other aerial vehicles under any circumstance. Unless specified otherwise, all hoses are manufactured according to EN ISO 1307:2008. Our products are not designated for the sale to the general public and do not fulfill the conditions for "GS-certification", unless stated otherwise in the product datasheet.